

# GPS Mode


There are two methods for marking waypoints.

- Basic (to select your current position)
- Advanced (to input desired destinations)

## Basic Waypoint Selection

*To Mark Your Present Position:*

1. Turn the ignition switch ON ( 1 ).
2. Use the GPS/WP button ( 1 ) to select the GPS mode (page 66 ).
3. To select a higher waypoint number ( 2 ), press and release the plus button ( 3 ).  
To select a lower waypoint number, press and release the minus button ( 4 ).  
To fast scroll, press and hold the plus or minus button until the desired waypoint number appears.
4. Press and hold the GPS/WP button for about 2 seconds, until the waypoint number and waypoint distance ( 5 ) flash. Then release the button.

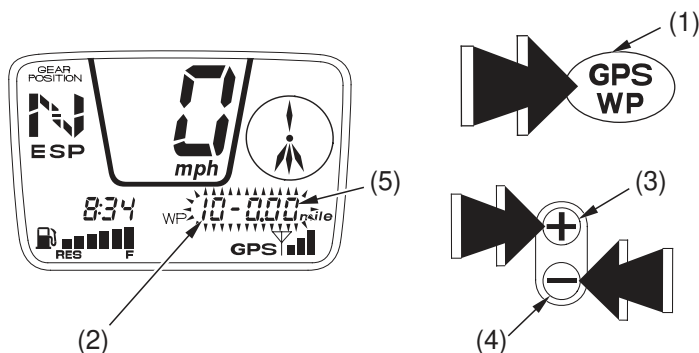

- (1) GPS/WP button  
(2) waypoint number  
(3) plus button

- (4) minus button  
(5) waypoint distance

(cont'd)