

Engine Oil & Filter

10. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 230).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

Add Engine Oil:

11. Install the drain bolts with new sealing washers and tighten to the specified torque:
Oil tank drain bolt:
 18 lbf·ft (25 N·m , 2.5 kgf·m)
Crankcase drain bolt:
 18 lbf·ft (25 N·m , 2.5 kgf·m)
12. Install the engine guard and the mounting bolts. Tighten the mounting bolts.
13. Fill the oil tank with the recommended grade oil approximately:
 4.9 US qt (4.6 ℓ)
14. Reinstall the engine oil fill cap.
15. Check the oil level (page 158).
16. Check that there are no oil leaks.

If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.