

# Indicators & Displays

---

## Lamp Check

The high oil/coolant temperature indicator, neutral indicator, 4WD indicator and reverse indicator come on for a few seconds and then go off when you turn the ignition switch ON (q).

### (TRX500FPA only)

The PS (Electric Power Steering) indicator comes on when you turn the ignition switch ON (q) so you can check that it is working. The indicator remains on until the engine is started.

These indicators are identified in the table on [pages 17, 18](#) with the words: *Lamp Check*.

When applicable, the reverse or neutral indicators come on when you turn the ignition switch ON (q) and remain on until you shift out of reverse or neutral.

If one of these indicators does not come on when it should, have your dealer check for problems.