

# Indicators & Displays

## Fuel Gauge

The fuel gauge liquid crystal display (1) shows the approximate fuel supply available. The fuel tank capacity is:

**3.96 US gal (15.0 ℓ)**

TRX500FA:


When segment RES (2) flashes, you should refill the tank as soon as possible. The amount of fuel remaining when the flashing starts is approximately:

**0.66 US gal (2.5 ℓ)**

TRX500FPA:

When segment E (3) and low fuel indicator (4) flash, you should refill the tank as soon as possible. The amount of fuel remaining when the flashing starts is approximately:

**0.66 US gal (2.5 ℓ)**

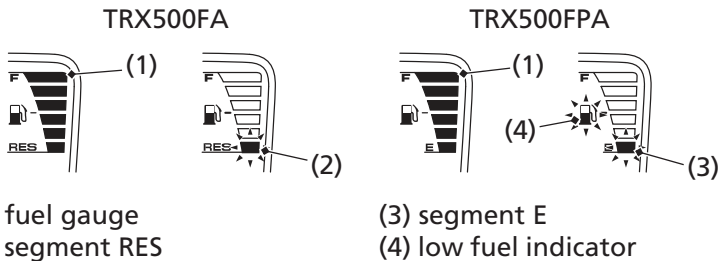

All segments will flash, when the fuel gauge function fails. See your dealer.

TRX500FA



TRX500FPA

