


Shifting Gears


Two gearshift switches are located next to the left handlebar grip: upshift (a) and downshift (s).

To upshift the transmission, press the upshift switch (4) once.
To downshift the transmission, press the downshift switch (5) once.

UPSHIFTING SEQUENCE

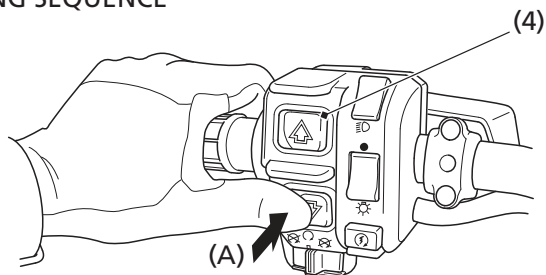

DOWNSHIFTING SEQUENCE

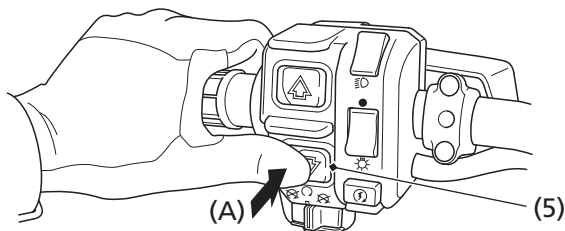

- (4) upshift switch (A) press
- (5) downshift switch