

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		⇒	mi	100	600	1200	
			km	150	1000	2000	
			MONTH	1	6	12	
NOTE	HOURS	20	100	200			
	DRIVETRAIN BOOTS						175
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R: EVERY 2 YEARS)		129 131
*	BRAKE FLUID	NOTE 3					156
*	BRAKE SHOES WEAR	NOTE 1					164
*	BRAKE PADS WEAR	NOTE 1, 2					159
*	BRAKE LIGHT SWITCH						165
	BRAKE SYSTEM						156
	GUARDS						174
*	SUSPENSION						154
*	SPARK ARRESTER				C	C	151
*	NUTS, BOLTS, FASTENERS						—
**	WHEELS/TIRES						167
**	TIE-ROD AND JOINT BOOTS						—
**	STEERING SHAFT HOLDER BEARINGS						—
**	STEERING SYSTEM						—

\* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 236).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.