

Engine Oil & Filter

10. Pour the drained oil into a suitable container and dispose of it in an approved manner ([page 196](#)).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

Add Engine Oil:

11. Install the drain bolts with new sealing washers and tighten to the specified torque:
 - Oil tank drain bolt:
18 lbf·ft (25 N·m , 2.5 kgf·m)
 - Crankcase drain bolt:
18 lbf·ft (25 N·m , 2.5 kgf·m)
12. Install the engine guard and the mounting bolts. Tighten the mounting bolts.
13. Fill the oil tank with the recommended grade oil approximately:
5.0 US qt (4.7 ℓ)
14. Reinstall the engine oil fill cap.
15. Check the oil level ([page 124](#)).
16. Check that there are no oil leaks.

If a torque wrench is not used for installation, see your dealer as soon as possible to verify proper assembly.