

Gear Case Oil


1. Park the ATV on level ground.
2. Place an oil drain pan under the oil drain bolt (1).
3. Remove the oil fill cap (2), drain bolt and sealing washer (3).
4. After the oil has completely drained, reinstall the drain bolt with a new sealing washer and tighten it to the specified torque:
9 lbf·ft (12 N·m , 1.2 kgf·m)
5. Pour the drained oil into a suitable container and dispose of it in an approved manner ([page 196](#)).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

6. Fill the gear case with the recommended oil.
2.5 US oz (75 cm³)
7. Remove the oil level check bolt (4) and sealing washer. Make sure the oil level reaches the oil level check hole (5).
8. Install the oil fill cap and oil level check bolt with a new sealing washer.

REAR

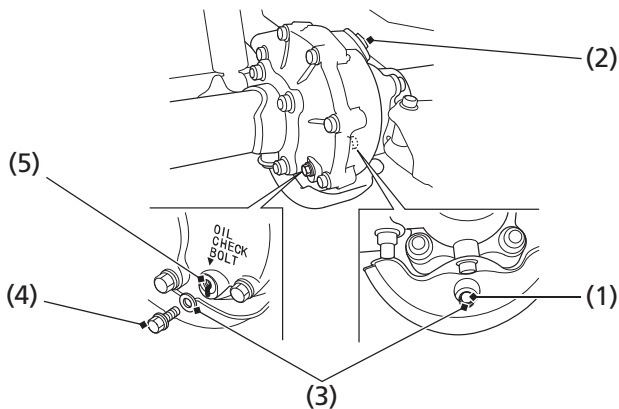

(1) oil drain bolt

(2) oil fill cap

(3) sealing washers

(4) oil level check bolt

(5) oil level check hole