


# Air Cleaner

---

## Cleaning

1. Remove the seat ([page 116](#)).

### UNDER SEAT

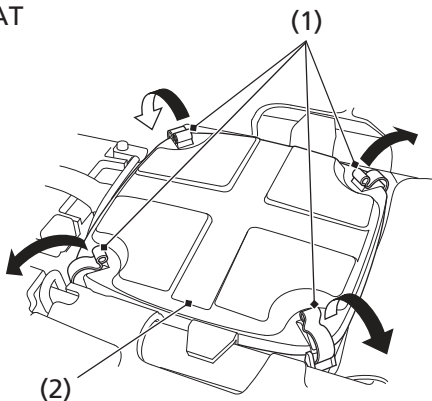

(1) retainer clips

(2) air cleaner housing cover

2. Unlatch the retainer clips (1).
3. Remove the air cleaner housing cover (2).