


# Indicators & Displays

When the coolant is over specified temperature, the 5th segment (6) appears and the high coolant temperature indicator (7) lights. If this occurs, stop the engine and check the reserve tank coolant level. Read [pages 224 – 225](#) and do not ride the ATV until the problem has been corrected.

## NOTICE


*Continuing to ride with an overheated engine can cause serious engine damage.*

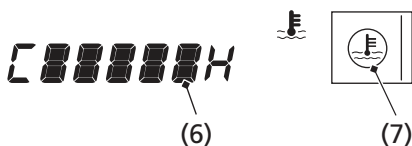

(6) 5th segment

(7) high coolant temperature indicator

If the "C ----- H" (8) blinks, the meter input signal fails. See your dealer.

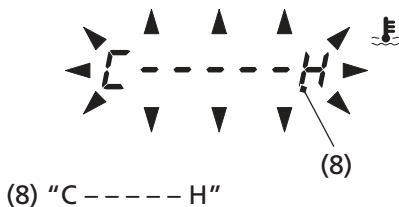

(8) "C ----- H"