

# Engine Oil & Filter

---

5. Reinstall the oil filter cover, making sure the bolts are tightened to the specified torque:  
**7 lbf·ft (10 N·m, 1.0 kgf·m)**
6. Pour the drained oil into a suitable container and dispose of it in an approved manner ([page 210](#)).

## NOTICE

*Improper disposal of drained fluids is harmful to the environment.*

7. Install the tank cover assembly and seat.

### *Add Engine Oil:*

1. Reinstall the oil drain bolt with the new sealing washer and tighten it to the specified torque:  
**18 lbf·ft (25 N·m, 2.5 kgf·m)**
2. Fill the crankcase with the recommended grade oil approximately:  
**3.2 US qt (3.0 ℓ)**
3. Reinstall the oil fill cap/dipstick.
4. Start the engine and let it idle for 3 – 5 minutes.
5. Stop the engine, wait 2 – 3 minutes and check the oil level. Make sure the oil is between the upper and lower level marks on the oil fill cap/dipstick. If necessary, add more oil but do not overfill.
6. Check that there are no oil leaks.
7. Install the oil check/fill door.

If a torque wrench is not used for installation, see your dealer as soon as possible to verify proper assembly.