


# Coolant

---

## 8. TRX500FE2 only:

Remove the center radiator grill cover by releasing the tab A, tab B, hook A and hook B.

### FRONT (TRX500FE2)

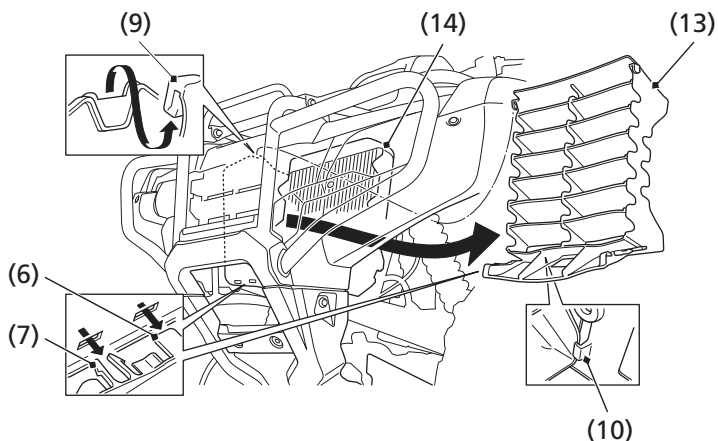

- (6) tab A
- (7) tab B
- (9) hook A

- (10) hook B
- (13) center radiator grill cover
- (14) radiator core

9. Wash the radiator core (14) and radiator grill covers.

### NOTICE

*Do not apply pressured water directly to the radiator core. The pressured water can damage the radiator core.*

10. Install the removed parts in reverse order of removal.