


# Rear Final Gear Oil

---

1. Park your ATV on a firm, level surface.

## REAR UNDERSIDE

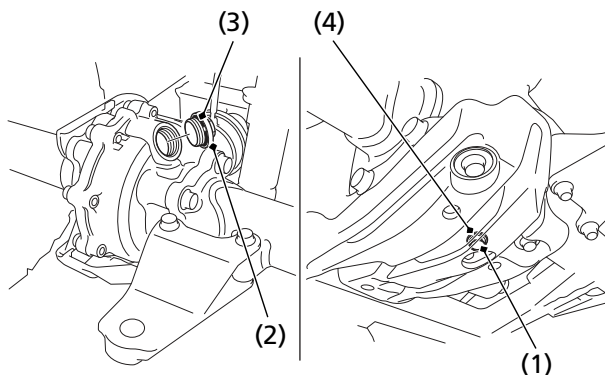

(1) oil drain bolt  
(2) oil fill cap

(3) O-ring  
(4) sealing washer

2. Place an oil drain pan under the oil drain bolt (1).
3. Remove the oil fill cap (2), O-ring (3), drain bolt and sealing washer (4).
4. After the oil has completely drained, reinstall the drain bolt with a new sealing washer and tighten it to the specified torque:  
**9 lbf·ft (12 N·m, 1.2 kgf·m)**

(cont'd)