
Air Cleaner

Dust Cover

(1) dust cover

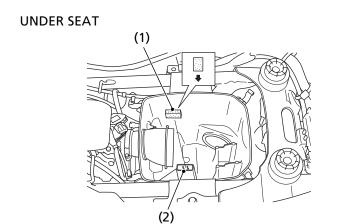

Do not push the dust cover (1) too far into the breather joint (2). If the dust cover is dirty, clean it.

(2) breather joint