


# Indicators & Displays

---

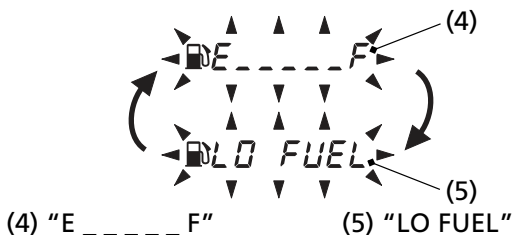


When the fuel gauge show "E \_ \_ \_ \_ \_ F" (4) and "LO FUEL" (5) blink 3 times alternately and fuel mark blinks, you should refuel as soon as possible.

The amount of fuel reserve is approximately:

**1.29 US gal (4.9 l)**

Fuel gauge failure:

If the fuel gauge "E \_ \_ \_ \_ \_ F" (6) is blinking, the fuel gauge function has failed. See your dealer.

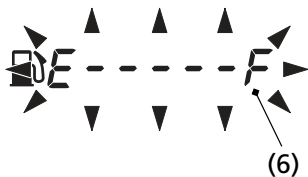

(6) "E \_ \_ \_ \_ \_ F"