

If a Fuse Blows

PS (Electric Power Steering) Fuse Access

1. Turn the ignition switch to OFF (O) before checking the fuse.
2. Remove the seat (page 124).
3. Remove the rear fender cover (page 125).
4. To access the PS fuse block (1), remove the fuse cover (2).
If the PS fuse block is blown, see your dealer for this service.
5. Install the fuse cover.
6. Install the rear fender cover.
7. Install the seat.

UNDER REAR FENDER COVER

