

# Starting & Stopping the Engine

---

## Stalled Engine

You can restart the engine while the vehicle is stopped by squeezing the front brake lever and pressing the start/override button.

Do not press the throttle lever while starting in gear. The engine will not start if the throttle is fully open (because the electronic control module cuts off the fuel supply).

Once you have started the engine, release the front brake lever, then apply throttle gradually.