
Vehicle Identification

Serial Numbers


The VIN and engine serial number may be required when ordering replacement parts. You may record these numbers in the Quick Reference section at the rear of this manual.

The VIN (1) is stamped on the front of the frame. Remove the radiator cap lid (page 147).

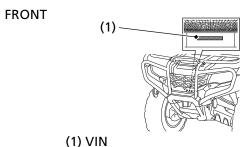

The engine number (2) is stamped on the upper side of the rear crankcase

REAR

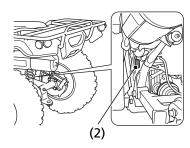

(2) engine number