

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL	REGULAR		Refer to page	
			MAINT.	MAINT. INTERVAL			
			mi	100	600		1200
			km	150	1000		2000
MONTH	1	6	12				
NOTE	HOURS	20	100	200			
	DRIVETRAIN BOOTS					187	
	FRONT/REAR FINAL GEAR OIL			(R: EVERY 2 YEARS)		136, 139	
*	BRAKE FLUID	NOTE 3				167	
*	BRAKE SHOES WEAR	NOTE 1, 2				175	
*	BRAKE PADS WEAR	NOTE 1, 2				170	
*	BRAKE LIGHT SWITCH					176	
	BRAKE SYSTEM					167	
*	REVERSE LOCK SYSTEM GUARDS					158, 185	
*	CLUTCH SYSTEM					157	
*	SUSPENSION					164	
*	SPARK ARRESTER			C	C	163	
*	NUTS, BOLTS, FASTENERS					—	
**	WHEELS/TIRES					178	
**	TIE-ROD AND JOINT BOOTS					—	
**	STEERING SHAFT HOLDER BEARINGS					—	
**	STEERING SYSTEM					—	

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 248).

** In the interest of safety, we recommend these items be serviced only by your dealer.