

# Front Final Gear Oil

---


1. Park your ATV on a firm, level surface.
2. Place an oil drain pan under the oil drain bolt (1).
3. Remove the oil fill cap (2), O-ring (3), drain bolt and sealing washer (4).
4. After the oil has completely drained, reinstall the drain bolt with a new sealing washer and tighten it to the specified torque:  
**9 lbf·ft (12 N·m, 1.2 kgf·m)**
5. Pour the drained oil into a suitable container and dispose of it in an approved manner ([page 208](#)).

## NOTICE

*Improper disposal of drained fluids is harmful to the environment.*

6. Fill the front final gear case with the recommended oil.  
**11.0 US oz (325 cm<sup>3</sup>)**  
Make sure the oil level is at the lower edge of the oil fill inspection hole (5).
7. Coat a new O-ring with grease and install it into the fill cap groove and tighten it to the specified torque:  
**9 lbf·ft (12 N·m, 1.2 kgf·m)**

FRONT

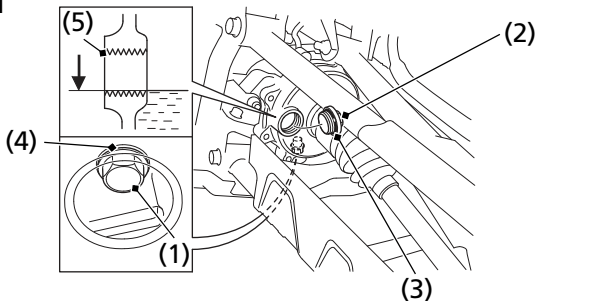

(1) oil drain bolt

(2) oil fill cap

(3) O-ring

(4) sealing washer

(5) oil fill inspection hole