

# Operation Component Locations

---


rear brake lever/  
parking brake lever

P/R lever

headlight switch

front brake lever

4WD switch

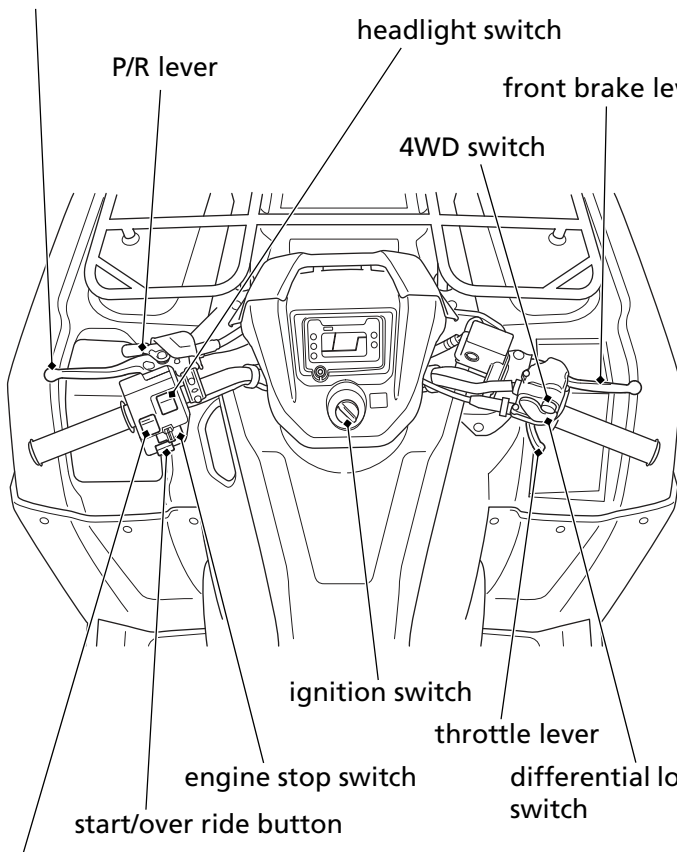

engine stop switch

start/over ride button

ignition switch

throttle lever

differential lock  
switch

headlight dimmer switch