


# Controls & Features

---

## Engine Stop Switch



### LEFT HANDLEBAR

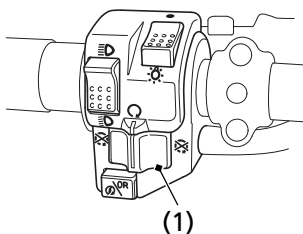

- (1) engine stop switch    ☒ OFF  
   ○ RUN

The engine stop switch (1) is used to stop the engine in an emergency. To operate, slide the switch to the OFF (☒) position. The switch must be in the RUN (○) position to start the engine, and it should normally remain in the RUN (○) position even when the engine is OFF.

If your ATV is stopped with the ignition switch ON (I) and the engine stop switch OFF (☒), the battery will discharge. Turn the ignition switch to OFF (O) to prevent battery discharge.