

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page	
			mi	100	600		1200
			km	150	1000		2000
		MONTH	1	6	12		
NOTE	HOURS	20	100	200			
	DRIVETRAIN BOOTS			I	I	187	
	FRONT/REAR FINAL GEAR OIL			(R: EVERY 2 YEARS)	I	136, 139	
*	BRAKE FLUID	NOTE 3		I	I	167	
*	BRAKE SHOES WEAR	NOTE 1, 2			I	175	
*	BRAKE PADS WEAR	NOTE 1, 2			I	170	
*	BRAKE LIGHT SWITCH		I	I	I	176	
	BRAKE SYSTEM		I	I	I	167	
*	REVERSE LOCK SYSTEM GUARDS		I	I	I	158	
				I	I	185	
*	CLUTCH SYSTEM		I	I	I	157	
*	SUSPENSION			I	I	164	
*	SPARK ARRESTER			C	C	163	
*	NUTS, BOLTS, FASTENERS		I		I	—	
**	WHEELS/TIRES		I	I	I	178	
**	TIE-ROD AND JOINT BOOTS		I	I	I	—	
**	STEERING SHAFT HOLDER BEARINGS				I	—	
**	STEERING SYSTEM				I	—	

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 246).

** In the interest of safety, we recommend these items be serviced only by your dealer.