


Coolant

5. Remove the clips.

6. Remove the left radiator grill cover (5) by releasing the tab A (6), tab B (7), tab C (8), hook A (9) and hook B (10).

LEFT FRONT

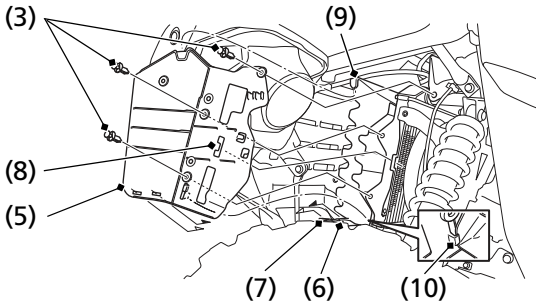

(3) clips

(7) tab B

(10) hook B

(5) left radiator grill cover


(8) tab C

(6) tab A

(9) hook A

7. Remove the right radiator grill cover (11) by releasing the tab A, tab B, tab C, hook A, hook B and hose (12), then remove the center radiator grill cover (13).

RIGHT FRONT

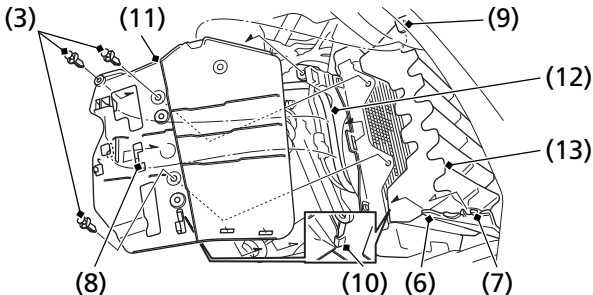

(11) right radiator grill cover

(13) center radiator grill cover

(12) hose

(cont'd)