


Indicators & Displays

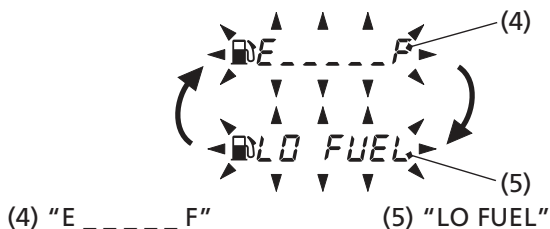

When the fuel gauge show "E _ _ _ _ _ F" (4) and "LO FUEL" (5) blink 3 times alternately and fuel mark blinks, you should refuel as soon as possible.

The amount of fuel reserve is approximately:

1.29 US gal (4.9 ℓ)

Fuel gauge failure:

If the fuel gauge "E - - - - - F" (6) is blinking, the fuel gauge function has failed. See your dealer.

