

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL	REGULAR		Refer to page	
			MAINT.	MAINT. INTERVAL			
			mi	100	600		1200
		km	150	1000	2000		
		MONTH	1	6	12		
		NOTE	HOURS	20	100	200	
	DRIVETRAIN BOOTS				I	I	187
	FRONT/REAR FINAL GEAR OIL				(R: EVERY 2 YEARS)	I	136, 139
*	BRAKE FLUID	NOTE 3			I	I	167
*	BRAKE SHOES WEAR	NOTE 1, 2				I	175
*	BRAKE PADS WEAR	NOTE 1, 2				I	170
*	BRAKE LIGHT SWITCH			I	I	I	176
	BRAKE SYSTEM			I	I	I	167
*	REVERSE LOCK SYSTEM GUARDS			I	I	I	158, 185
*	CLUTCH SYSTEM			I	I	I	157
*	SUSPENSION				I	I	164
*	SPARK ARRESTER				C	C	163
*	NUTS, BOLTS, FASTENERS			I		I	—
**	WHEELS/TIRES			I	I	I	178
**	TIE-ROD AND JOINT BOOTS			I	I	I	—
**	STEERING SHAFT HOLDER BEARINGS					I	—
**	STEERING SYSTEM					I	—

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 246).

** In the interest of safety, we recommend these items be serviced only by your dealer.