

Front Final Gear Oil


1. Park your ATV on a firm, level surface.
2. Place an oil drain pan under the oil drain bolt (1).
3. Remove the oil fill cap (2), O-ring (3), drain bolt and sealing washer (4).
4. After the oil has completely drained, reinstall the drain bolt with a new sealing washer and tighten it to the specified torque:
9 lbf·ft (12 N·m, 1.2 kgf·m)
5. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 208).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

6. Fill the front final gear case with the recommended oil.
11.0 US oz (325 cm³)
Make sure the oil level is at the lower edge of the oil fill inspection hole (5).
7. Coat a new O-ring with grease and install it into the fill cap groove and tighten it to the specified torque:
9 lbf·ft (12 N·m, 1.2 kgf·m)

FRONT

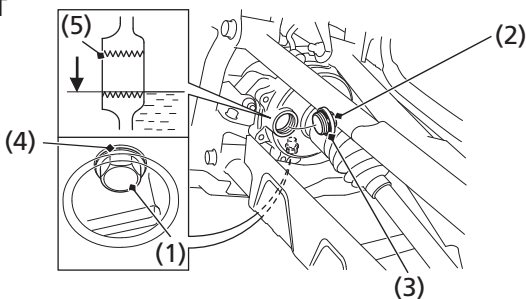

- | | |
|--------------------|------------------------------|
| (1) oil drain bolt | (4) sealing washer |
| (2) oil fill cap | (5) oil fill inspection hole |
| (3) O-ring | |