

# Starting & Stopping the Engine

---

## Stalled Engine

You can restart the engine while the vehicle is stopped by squeezing the front brake lever and pressing the start/over ride button.

Do not press the throttle lever while starting in gear. Your ATV is equipped with a start inhibitor system that will cut off the ignition if the throttle is open while attempting to start in gear.

Once you have started the engine, release the front brake lever, then apply throttle gradually.