

Index

operation component locations	11
owner's manual storage	119
oxygenated fuels	238

P

parking	103
parking brake/reverse lever (P/R lever)	45
passengers, no carrying	59
pavement, no riding on	73
pinging, engine	124
plug, spark	158
pre-ride inspection	61
problems, unexpected	204
propeller shaft boots & yoke joint boot	182
protective apparel	56
PS (Electric Power Steering) (TRX500FM6/FM7)	54

R

rear driveshaft boots	182
rear driveshaft guards	181
rear fender cover removal	121
rear final gear oil	136
recoil starter (Canada only)	42, 83
removal, rear fender cover	121
seat	120
tank cover assembly	122
reverse, assist cable	157
assist lever	157
gear, shifting into	86
indicator	14, 17
riding in	86