

# If You Have a Flat Tire

---

## Installation

1. Position the wheel.
2. Position each wheel nut so that the tapered side faces the wheel rim (2).
3. Hand-tighten the wheel nuts on the wheel, then lower the ATV to the ground before tightening the nuts in a crisscross (rather than circular) pattern to the specified torque:  
**47 lbf·ft (64 N·m, 6.5 kgf·m)**

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capability.