

# Starting & Stopping the Engine

---

## Starting Procedure

This ATV is fuel-injected with an automatic choke. Follow the procedure indicated below.

### Any Air Temperature

- Press the start/over ride button with the throttle completely closed.

The engine will not start if the throttle is fully open (because the electronic control module cuts off the fuel supply).

Snapping the throttle or fast idling for more than 5 minutes may cause exhaust pipe and muffler discolorations.