

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

FREQUENCY		WHICHEVER COMES FIRST	INITIAL MAINT.			REGULAR MAINT. INTERVAL			Refer to page
			mi	100	600	1200	Refer to page		
			km	150	1000	2000			
			MONTH	1	6	12			
ITEMS		NOTE	HOURS	20	100	200			
*	FUEL LINE					I		—	
*	THROTTLE OPERATION					I		154	
	AIR CLEANER	NOTE 1			C	C		148	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I		153	
	SPARK PLUG				I	I		158	
*	VALVE CLEARANCE				I	I	I	161	
	ENGINE OIL				INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R			127	
	ENGINE OIL FILTER				REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			132	
*	ENGINE IDLE SPEED				I	I	I	—	
	RADIATOR COOLANT	NOTE 3			I	I		140	
*	COOLING SYSTEM	NOTE 2			I	I		—	

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 242).