

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL			Refer to page		
			MAINT. INTERVAL					
			mi	100	600		1200	
			km	150	1000		2000	
NOTE	HOURS	1	6	12				
*	FUEL LINE				I	—		
*	THROTTLE OPERATION				I	154		
	AIR CLEANER	NOTE 1			C	C	148	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	153	
	SPARK PLUG				I	I	158	
*	VALVE CLEARANCE				I	I	I	161
	ENGINE OIL			INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R			127	
	ENGINE OIL FILTER			REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			132	
*	ENGINE IDLE SPEED				I	I	I	—
	RADIATOR COOLANT	NOTE 3			I	I	140	
*	COOLING SYSTEM	NOTE 2			I	I	—	

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 242).