

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
			MONTH	1	6	12	
		NOTE	HOURS	20	100	200	
	DRIVETRAIN BOOTS				I	I	182
	FRONT/REAR FINAL GEAR OIL				(R: EVERY 2 YEARS)	I	136, 138
*	BRAKE FLUID	NOTE 3			I	I	166
*	BRAKE PADS WEAR	NOTE 1, 2				I	169
*	BRAKE LIGHT SWITCH				I	I	173
	BRAKE SYSTEM				I	I	166
*	REVERSE INHIBITOR SYSTEM				I	I	157
	GUARDS				I	I	181
*	CLUTCH SYSTEM				I	I	156
*	SUSPENSION				I	I	163
*	SPARK ARRESTER				C	C	162
*	NUTS, BOLTS, FASTENERS				I	I	—
**	WHEELS/TIRES				I	I	174
**	TIE-ROD AND JOINT BOOTS				I	I	—
**	STEERING SHAFT HOLDER BEARINGS					I	—
**	STEERING SYSTEM					I	—

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 242).

** In the interest of safety, we recommend these items be serviced only by your dealer.