


# Controls & Features

---

## Accessory Socket

LEFT FRONT

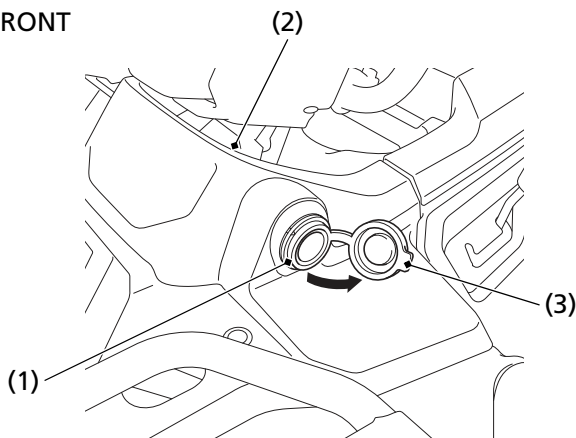

(1) accessory socket  
(2) front center cover

(3) accessory socket cap

The accessory socket (1) is attached to the left side of the front center cover (2). You can use the accessory socket to power a trouble light, spotlight, CB radio, or cell phone, etc.

### NOTICE

*Do not plug in any heat-generating accessory, such as an automobile cigarette lighter, because it can damage the socket.*

To use the accessory socket, turn the ignition switch to ON (I), start the engine. Then turn the headlights OFF (●), and open the accessory socket cap (3).