


Coolant

- Remove the clips (3).
- Remove the left radiator grill cover (5) by releasing the tab A (6), tab B (7), tab C (8), hook A (9) and hook B (10).

LEFT FRONT

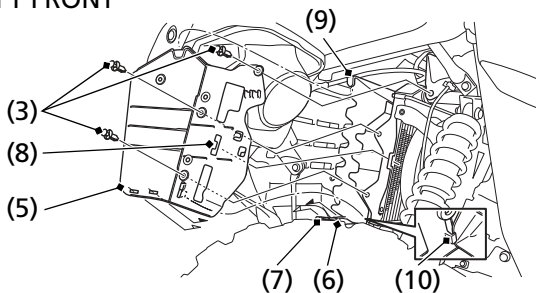


- (3) clips (7) tab B (10) hook B
(5) left radiator grill cover (8) tab C
(6) tab A (9) hook A

7. TRX520FA5 only:

Remove the right radiator grill cover (11) by releasing the tab A, tab B, tab C, hook A, hook B and hose (12), then remove the center radiator grill cover (13).

RIGHT FRONT

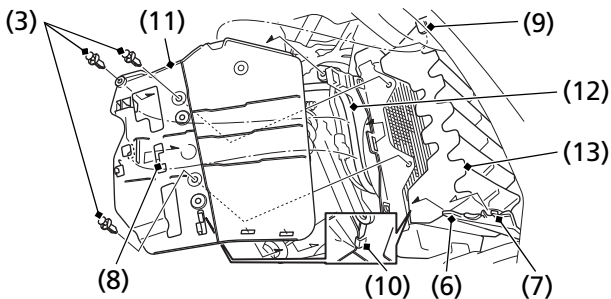

- (11) right radiator grill cover (13) center radiator grill cover
(12) hose

(cont'd)