



# Shifting Gears

---

## UPSHIFTING SEQUENCE

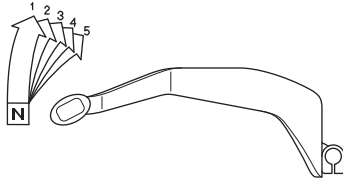

## DOWNSHIFTING SEQUENCE

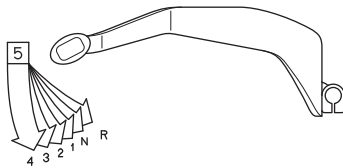

Your ATV has five forward gears: 1, 2, 3, 4, and 5.

The shift lever is located near the left footpeg. One full stroke of the shift lever shifts the transmission to the next higher or lower gear in the shifting sequence. The shift lever automatically returns to the horizontal position when released.

To upshift to a higher gear, put the toe of your boot under the shift lever and raise it one full stroke. To downshift, step on the shift lever and depress it one full stroke.

To select reverse, see *Riding in Reverse*, page 89.

After starting the engine and letting it warm up, follow this procedure:

1. With the transmission in neutral, release the parking brake, but continue squeezing the rear brake lever/parking brake lever.