

# Rear Final Gear Oil


1. Park your ATV on a firm, level surface.
2. Place an oil drain pan under the oil drain bolt (1).
3. Remove the oil fill cap (2), O-ring (3), drain bolt and sealing washer (4).
4. After the oil has completely drained, reinstall the drain bolt with a new sealing washer and tighten it to the specified torque:  
**9 lbf·ft (12 N·m, 1.2 kgf·m)**
5. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 204).

## NOTICE

*Improper disposal of drained fluids is harmful to the environment.*

6. Fill the rear final gear case with the recommended oil.  
**4.2 US oz (125 cm<sup>3</sup>)**  
Make sure the oil level is at the lower edge of the oil fill inspection hole (5).
7. Coat a new O-ring with grease and install it into the fill cap groove and tighten it to the specified torque:  
**9 lbf·ft (12 N·m, 1.2 kgf·m)**

## REAR

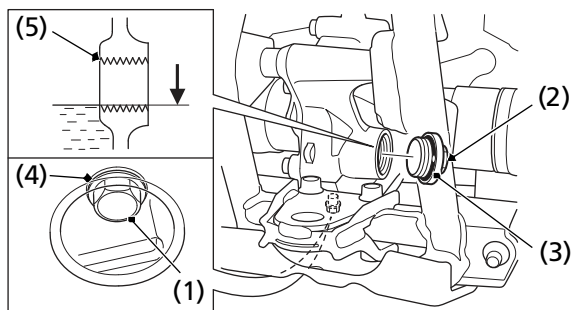

- (1) oil drain bolt  
(2) oil fill cap  
(3) O-ring

- (4) sealing washer  
(5) oil fill inspection hole