
## If a Fuse Blows

## Main Fuse Access

- 1. To prevent an accidental short circuit, turn the ignition switch OFF (O) before checking or replacing the fuses.
- 2. Remove the seat (page 112).
- 3. To access the main fuse (2) (3), remove the fuse box cover (4).

## UNDER SEAT

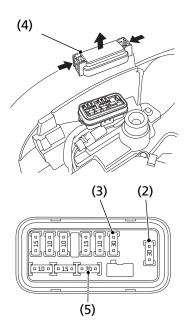

(2) main fuse 1(3) main fuse 2

(4) fuse box cover (5) spare main fuse

4. Pull the main fuse out. If it is blown, install the spare main fuse (5).

## 200 Taking Care of the Unexpected