## **Indicators & Displays**

1	0.1	C.1 1' 1 C.1 1
1	Odometer/tripmeter	Selects display of the odometer or
	select button	tripmeter A or tripmeter B (page 24 ).
		This button also used to reset the oil
		change indicator (page 22 ).
	Odometer/tripmeter	Selects display of the odometer or
	select button	tripmeter. Resets the tripmeter to zero
	(TRX680FGA)	(0) (page 23).
		This button also used to reset the oil
		change indicator (page 22 ).
2	RESET button	Resets the tripmeter to zero (0)
		(page 23).
		This button also used to reset the oil
		change indicator (page 22 ).
	Hourmeter/digital	Selects display of the hourmeter or
	clock select button	digital clock (pages 25, 27).
	(TRX680FGA)	This button also used to reset the oil
		change indicator (page 22 ).
3	Reverse indicator	Lights when the transmission is in
		reverse. Lamp check.
4	4WD indicator	Lights when the drive mode is in the
		4WD mode. The 4WD indicator
		blinks if there is a possible problem
		with the 2WD/4WD select system.
		See your Honda dealer as soon as
		possible. Lamp check.
5	High oil/coolant	Lights when engine oil and/or
	temperature	coolant temperature is high enough
	indicator	to adversely affect the service life of
		the engine.
		If the high oil/coolant temperature
		indicator comes on while you are
		riding, immediately bring the vehicle
		to a stop, turn the engine off and let
		it cool. See page 223. Lamp Check.