

# Indicators & Displays

## Oil Change Indicator

The oil change indicator (1) appears in the display when the mileage or operating hours on your ATV approaches the oil change interval specified on the maintenance schedule.

Reset the indicator after each oil change.


(For TRX680FA)

To reset the indicator, press and hold both the odometer/tripmeter select button (2) and RESET button (3) for more than 2 seconds. The indicator will disappear.


(For TRX680FGA)

To reset the indicator, press and hold both the odometer/tripmeter select button (2) and digital clock/hourmeter select button (4) for more than 2 seconds. The indicator will disappear.

If the oil is changed before the oil change indicator appears, be sure to reset the oil change indicator after changing the oil. The indicator will appear for 2 seconds, then disappear. This means the indicator is reset.

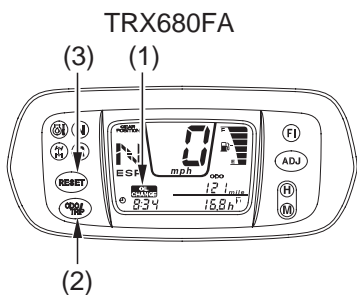

- (1) oil change indicator
- (2) odometer/tripmeter select button

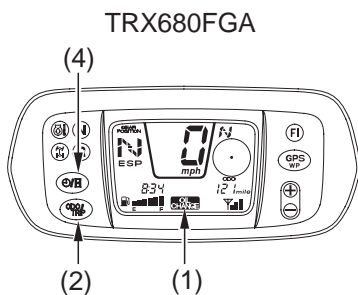

- (3) RESET button
- (4) digital clock/hourmeter select button