


# GPS Mode

## Waypoint Number Display

A waypoint number (1) appears in the display when the GPS mode is selected. You can store up to 100 waypoints, numbered from 0-99. To mark a waypoint, see page 63.

To select a waypoint number:

- To select a higher waypoint number, press and release the plus button (2).
- To select a lower waypoint number, press and release the minus button (3).
- To fast scroll: press and hold the plus or minus button until the desired waypoint number appears.

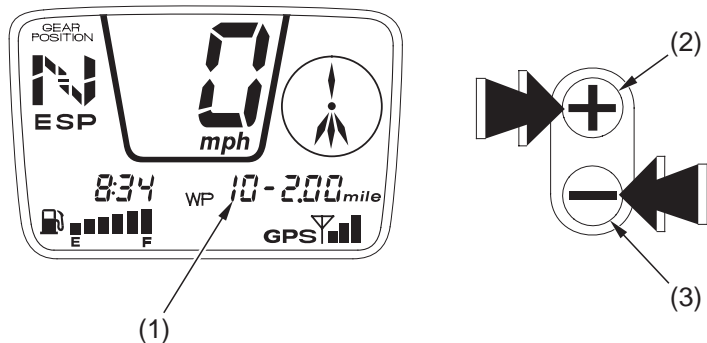

(1) waypoint number  
(2) plus button

(3) minus button