

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER	INITIAL	REGULAR		Refer to page	
		COMES	MAINT.	MAINT. INTERVAL			
		FIRST	mi	100	600		1200
		⇨	km	150	1000		2000
	MONTH	1	6	12			
	NOTE	HOURS	20	100	200		
*	FUEL LINE				I	—	
*	THROTTLE OPERATION				I	166	
	AIR CLEANER	NOTE 1			C C	161	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I I	165	
	SPARK PLUG				I	168	
*	VALVE CLEARANCE			I	I I	171	
	ENGINE OIL			INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R		144	
	ENGINE OIL FILTER					149	
	RADIATOR COOLANT	NOTE 3			I I	156	
*	COOLING SYSTEM	NOTE 2			I I	—	

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 248).