

# Engine Oil & Filter

## Changing Engine Oil & Filter

Refer to *Safety Precautions* on [page 99](#).

Your ATV's oil filter has very specific performance requirements. Use a new Honda Genuine oil filter specified for your model or a filter of equal quality.

### NOTICE


*Using the wrong oil filter may result in leaks or engine damage.*

This procedure requires mechanical skill and professional tools such as a torque wrench and oil filter wrench, as well as a means for disposing of the drained fluid ([page 182](#)). If you do not have the skills or the tools, see your dealer.

#### *Drain the Engine Oil:*

1. With the ATV on level ground, remove the oil fill cap from the left side of crankcase.
2. Place an oil drain pan under the crankcase and remove the engine oil drain bolt (1).

#### UNDER ENGINE

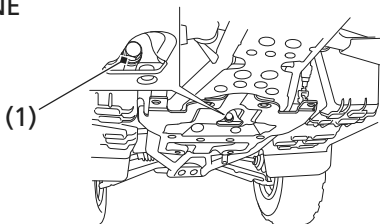

(1) engine oil drain bolt

(cont'd)