


Spark Plugs

5. Remove the oil fill cap lid ([page 118](#)).
6. Remove the bolts A (6), collars (7), bolts B (8) and left engine side cover (9).


LEFT SIDE

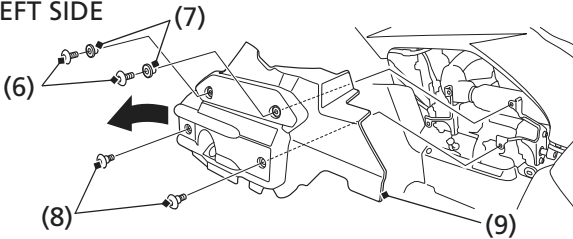


(6) bolts A
(7) collars

(8) bolts B
(9) left engine side cover

7. Clean any dirt from around the spark plug bases.
8. Disconnect the top spark plug cap (10) and side spark plug cap (11). Take care to avoid damaging the spark plug wires when disconnecting the caps.
9. Using a spark plug wrench provided in the tool kit, remove the spark plugs.

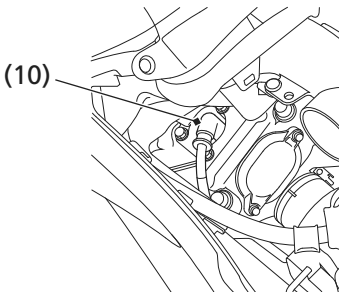

(10) top spark plug cap

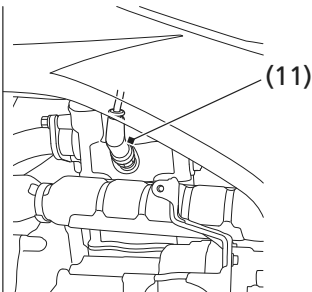

(11) side spark plug cap

(cont'd)