

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
			MONTH	1	6	12	
NOTE	HOURS	20	100	200			
	DRIVETRAIN BOOTS				I	I	163
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R: EVERY 2 YEARS)	I	124 126
*	BRAKE FLUID	NOTE 3			I	I	147
*	BRAKE PADS WEAR	NOTE 1, 2				I	150
*	BRAKE LIGHT SWITCH			I	I	I	154
	BRAKE SYSTEM			I	I	I	147
	GUARDS				I	I	162
*	SUSPENSION				I	I	—
*	SPARK ARRESTER				C	C	145
*	NUTS, BOLTS, FASTENERS			I		I	—
**	WHEELS/TIRES			I	I	I	—
**	TIE-ROD AND JOINT BOOTS			I	I	I	—
**	STEERING SHAFT HOLDER BEARINGS					I	—
**	STEERING SYSTEM					I	—

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 224).

** In the interest of safety, we recommend these items be serviced only by your dealer.