

Engine Oil

Changing Engine Oil


Refer to *Safety Precautions* on [page 84](#).

This procedure requires mechanical skill and professional tools such as a torque wrench as well as a means for disposing of the drained fluid ([page 160](#)). If you do not have the skills or the tools, see your dealer.

Drain the Engine Oil:

1. With the ATV on level ground, remove the oil fill cap/dipstick from the right crankcase cover.
2. Place an oil drain pan under the crankcase and remove the engine oil drain bolt (1).

UNDER ENGINE

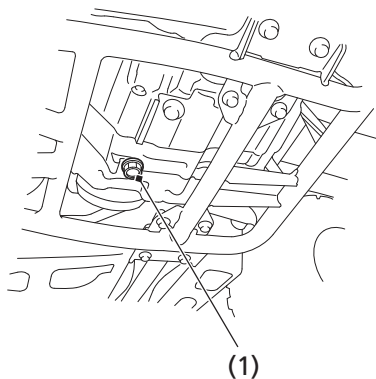

(1) engine oil drain bolt

(cont'd)