


# Safe Riding Precautions

---

## Air Intake Restrictor Removal

1. Remove the seat ([page 95](#)).
  2. Unlatch the four retainer clips (5).
  3. Remove the air cleaner housing cover (6).
  4. Remove the air intake restrictor (7).
- Reinstall in the reverse order of removal.

### UNDER SEAT

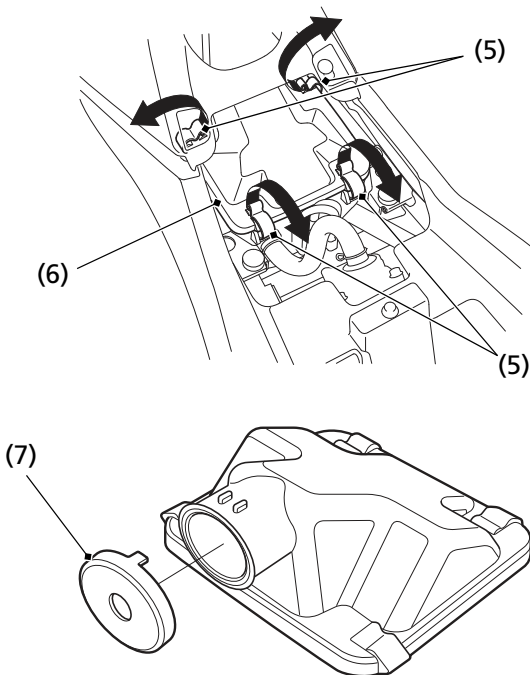

(5) retainer clips  
(6) air cleaner housing cover

(7) air intake restrictor