

# Engine Oil

---

3. Pour the drained oil into a suitable container and dispose of it in an approved manner ([page 160](#)).

## NOTICE

*Improper disposal of drained fluids is harmful to the environment.*

### *Add Engine Oil:*

1. Check that the drain bolt sealing washer is in good condition. If necessary, replace the sealing washer.
2. Reinstall the oil drain bolt with a new sealing washer, and tighten it to the specified torque:  
**17 lbf·ft (24 N·m, 2.4 kgf·m)**
3. Fill the crankcase with the recommended grade oil approximately:  
**0.7 US qt (0.7 ℓ)**
4. Reinstall the oil fill cap/dipstick.
5. Start the engine and let it idle for 3–5 minutes.
6. Stop the engine and check the oil level. Make sure the oil is between the upper and lower level marks on the oil fill cap/dipstick. If necessary, add more oil but do not overfill.
7. Check that there are no oil leaks.

If a torque wrench is not used for installation, see your dealer as soon as possible to verify proper assembly.