



**Torque Control level** ➡ P.43

## Display Check

When the ignition switch is turned on, all the mode and digital segments will show. If any part of these displays does not come on when it should, have your dealer check for problems.

## Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing:  
approximately 1.06 US gal (4.0 L)



At the same time, the available driving distance is displayed.

**If the fuel gauge indicator flashes in a repeat pattern or turns off** ➡ P.113

## Handle grip heater status icon

VFR1200XA/XDA

The handle grip heater status icon will appear while the handle grip heater is on. ➡ P.40